

BOSSCOM DAB+ Bluetooth for B&O

Advanced tuner for Bang & Olufsen systems handling

DAB/DAB+ – FM - Bluetooth

User Guide


Control with Bang & Olufsen remotes













B O S S C O M






DAILY OPERATION WITH BANG & OLUFSEN REMOTES









Go to "Older Bang & Olufsen Remotes" if  is not a key on your remote.










-   Press twice to select
-  Switch to DAB reception
-  Switch to Bluetooth
-   Switch to FM reception

-   Maneuvering in menus
-   Maneuvering in menus

-  –  Select a preset channel
-  Stand by key

ALTERNATIVE CONTROLS WITH BANG & OLUFSEN REMOTES

-   Store channel playing as preset 1
-   Store channel playing as preset 2
-   Store channel playing as preset 3
-   Store channel playing as preset 4
-   Store channel playing as preset 5

-   Store channel playing as preset 6
-   Store channel playing as preset 7
-   Store channel playing as preset 8
-   Store channel playing as preset 9
-   Store channel playing as preset 10

Contents

Daily Operation with Bang & Olufsen Remotes.....	2
Alternative Controls with Bang & Olufsen Remotes.....	2
Get Started – Quick Guide	4
Presets - Favorite Channels	5
SELECT OPERATION	6
DAB+ Channels.....	6
FM Channels	6
Bluetooth	7
MAIN MENU	7
OLDER BANG & OLUFSEN REMOTES.....	7
Daily Operation with Older Bang & Olufsen Remotes	8
Alternative Controls with Older Bang & Olufsen Remotes	8

GET STARTED – QUICK GUIDE


Advanced BOSSCOM circuitry has been added to this tuner, BOSSCOM DAB+ Bluetooth tuner, enabling it to be part of a remotely controlled Bang & Olufsen system. Complete control is obtained with a Bang & Olufsen remote control terminal.

- BOSSCOM DAB+ Bluetooth is a B&O compatible tuner
- BOSSCOM DAB+ Bluetooth be controlled by any Bang & Olufsen system remote from 1988 and on.
- BOSSCOM DAB+ Bluetooth may be controlled via the app UNDOK in iPhones, iPods, iPads or in Android phones and tablets.

BOSSCOM DAB+ Bluetooth may be connected to any Bang & Olufsen system and controlled by Bang & Olufsen remotes.

When switching on the BOSSCOM DAB+ Bluetooth with a Bang & Olufsen remote the Bang & Olufsen system is switched on too and the input with the BOSSCOM DAB+ Bluetooth automatically selected.

If the BOSSCOM DAB+ Bluetooth is to be used on handling DAB+, FM channels or music via Bluetooth, no further installation is required.

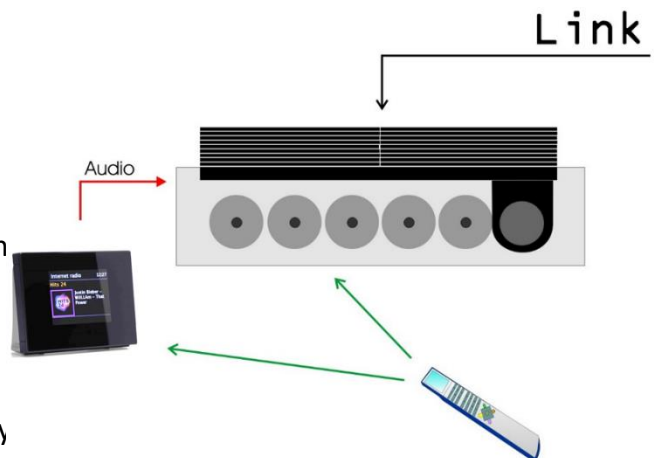

BOSSCOM DAB+ Bluetooth is connected to the system that is selected by pressing **AMEM** or **ATAPE** on the Bang & Olufsen remote.

If the Bang & Olufsen system has no AMEM or ATAPE operated input available, the BOSSCOM DAB+ Bluetooth needs to be connected to a different input socket and reprogramming of the BOSSCOM DAB+ Bluetooth is required accordingly. **See the Installation Guide.**

- *Bang & Olufsen link-systems not only allow for listening to system sources from the main room in any connected link room but also controlling them remotely. Thus a link connected kitchen speaker not only plays music from the main room, but allows for control of the system. BOSSCOM DAB+ Bluetooth may be part of that system. See the Installation Guide.*

PRESETS - FAVORITE CHANNELS

Enter favorite channels as presets selectable by pressing single digits on a Bang & Olufsen remote.

A total of 10 presets are available for FM, DAB+ and Internet Radio each. Presets may be changed at any time by pressing a single key on the Bang & Olufsen remote.

SELECT OPERATION

DAB+ CHANNELS

Switch on the BOSSCOM DAB+ Bluetooth tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.

Press **◀** and BOSSCOM DAB+ Bluetooth shifts to reception of **DAB radio**.

Select one of the presets by pressing a digit **0** – **9**, or press **▲** or **▼** to display a list of the available DAB channels.

The preset number and the signal quality are displayed at the very bottom of the display.

Other control options during DAB handling:

STOP 4	Info	CC 0 – 9	Save preset
STOP 8	Rescan for stations	STOP 4	DRC

FM CHANNELS

Switch on the BOSSCOM DAB+ Bluetooth tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.

Press **▲** or **▼** and BOSSCOM DAB+ Bluetooth shifts to reception of **FM Radio**.

Select one of the presets by pressing a digit **0** – **9**.

Press to display a list of the available channels.

The preset number and the signal quality are displayed at the very bottom of the display.

If the FM disable option is set, it is not possible to select FM reception.

Other control options during FM handling:

STOP 4	Info	CC 0 – 9	Save preset
▲ ▼	Set frequency.		

BLUETOOTH

Switch on the BOSSCOM DAB+ Bluetooth tuner with the Bang & Olufsen remote by pressing the key selected to handle the tuner on the Bang & Olufsen system.



Press  to select reception via **Bluetooth**.

The Bluetooth logo  flashing on the BOSSCOM DAB+ Bluetooth tuner's display indicates the tuner waiting for connection to a source.

Switch on a Bluetooth source and pair it with the BOSSCOM DAB+ Bluetooth tuner. If a password is required, use 0000.

 flashing stops with completed pairing

MAIN MENU


  Gives access to the main menu. The menu consists of a single line, in the bottom of the display. When chosen different receiver options are available.


Adjustment in this menu is required only under installation.

OLDER BANG & OLUFSEN REMOTES

The BOSSCOM DAB+ Bluetooth tuner may be controlled by all Bang & Olufsen system remotes.

Through the years Bang & Olufsen has marketed various models, where keys have been added or removed. Some keys have just changed names.

As an example the **PLAY** key has been replaced by the  key.

If the remote does **NOT** have a  key or a small joystick, control the BOSSCOM DAB+ Bluetooth tuner in accordance with below tables.

DAILY OPERATION WITH OLDER BANG & OLUFSEN REMOTES

PLAY **PLAY** Press twice to select

◀◀ Switch to DAB reception

▶▶ Switch to Bluetooth

PLAY ▼ Switch to FM reception

▲ **>** Maneuvering in menus

▼ **<** Maneuvering in menus

0 – **9** Select a preset

ALTERNATIVE CONTROLS WITH OLDER BANG & OLUFSEN REMOTES

PLAY **1** Store channel playing as preset 1

PLAY **2** Store channel playing as preset 2

PLAY **3** Store channel playing as preset 3

PLAY **4** Store channel playing as preset 4

PLAY **5** Store channel playing as preset 5

PLAY **6** Store channel playing as preset 6

PLAY **7** Store channel playing as preset 7

PLAY **8** Store channel playing as preset 8

PLAY **9** Store channel playing as preset 9

PLAY **0** Store channel playing as preset 10