

BeoCom 6000

Guide

This Guide contains instructions in how to set up and use the BeoCom 6000 handset with a BeoLine base.

You can also use the handset with other bases, such as a BeoCom 6000 base, a BeoLine PSTN base, or a BeoLine ISDN base. However, note that some functions work differently or are unavailable when you use the handset with one of these bases. Differences are described in this Guide.

Get started, 6

Find out how to connect and set up BeoCom 6000, use the handset keys and the display. You can also find information about maintenance and accessories available from your Bang & Olufsen retailer.

*NOTE! This is only possible if you use the handset with the BeoLine base.

Daily use, 18

Find out how to make and answer calls, adjust the handset volume, make calls from the Phonebook, Caller ID and Redial lists, store a number in the Phonebook after a call, silence the handset ringer and lock the keypad.

Advanced operations, 30

Find out how to enter, edit and delete names and numbers in the Phonebook, store numbers from the Redial and Caller ID lists, delete the content of the Caller ID and Redial lists*, call and store extension numbers, and adjust the volume level of some Bang & Olufsen audio or video products.

Preference settings, 40

This chapter provides an overview of the Settings menu. Find out, for example, how to register a handset to a base, set the time and date, and select settings for the ringer.

System use with several handsets, 43

Find out how to make a handset personal or common, call another handset, forward external calls and make an internal conference call.

Index, 49

Get started

When getting started, follow this procedure:

- 1 Connect the charger to the power outlet as described in the charger's Guide
- 2 Charge the handset battery
- 3 Connect the BeoLine base as described in the BeoLine Guide
- 4 Register the handset to the base.



The handset controls the battery charging, so you can always place the handset in the charger after use, even if the battery does not need recharging. Leaving the handset in the charger does not reduce the lifetime of the battery.

Charge the handset battery

If the handset requires charging, this occurs automatically when the handset is placed in the charger. For safety reasons, the battery is not charged prior to shipping. We recommend that you charge the handset for at least one hour before proceeding further with first-time registration of the handset.

About charging ...

- The charger must be connected to the power outlet.
- It takes four hours to fully charge the battery.
- The maximum talk-time per charge is approximately 15 hours.
- Standby time per charge is approximately 200 hours.

Battery status

The battery indicator in the display shows the charge level of the handset battery. If the batteries require charging, you are alerted by a message in the display and a sound signal.

To display the battery status ...

Press while the handset is in standby

OK

Turn the wheel until *Battery status* is shown and press OK. The current charge level appears in the display



Replace the battery


- > Remove the battery cover; press the cover lightly and slide it off.
- > Remove the battery and pull out the battery plug.
- > Insert the battery plug (A) and place the battery and the cords as shown.
- > Replace the battery cover. Make sure that the tabs and the slots snap into place correctly at the top and bottom of the cover.

Placement and surroundings

The phone must not be placed in damp, dusty or polluted surroundings and should not be exposed to direct sunlight or liquids. Avoid the handset charging contacts touching metal or greasy parts.

Clean BeoCom 6000


Clean your BeoCom 6000 with a soft, damp cloth with a few drops of mild detergent added. To clean the charging contacts of charger and handset – and *only* these parts – use a cotton swab and isopropyl alcohol. Do not use isopropyl alcohol to clean any other part of the charger or handset!

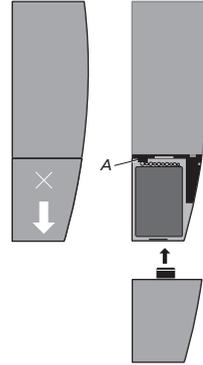

If the battery in the handset is replaced with a new battery, please follow the instructions accompanying the new battery. Use only original batteries from your Bang & Olufsen retailer!

First-time registration of the handset to a base

 For the base and the handset to be able to communicate, the handset must be registered to a base. Up to eight handsets can be registered to the same base*. You can not register a handset to more than one base.



Indicator light

The BeoLine base.

**If you use a BeoCom 6000 base, a BeoLine PSTN base or a BeoLine ISDN base, you can only register six handsets.*

- > Disconnect the base from the mains for at least two seconds and then reconnect it. The indicator light flashes, and the base is open for registration for five minutes.

When your base is open for registration, follow the procedure on the following page.

Press to switch on the handset. *Register handset to base?* is shown in the display

OK

Register
handset to base?

Press OK. The handset searches for an open base

OK

When a base is located, the PARK number* for the base is shown. Check the number against the number on the base

Base 01/02
36-000077123456

If the numbers do not match, turn the wheel to view the available bases. If your base is not shown, open the base for registration once more and repeat the procedure



Base 02/02
36-000077234567

If the numbers match, press to register the handset to the base

OK

If the base prompts you for a pincode, enter the pincode and press OK. The display tells you when registration is complete. You can now name the handset, as described on page 10

0 – 9

OK

**Depending on which base you have, the PARK number can be found on a label behind the socket cover, on the socket cover, or on the bottom of the base.*

Name the handset

You can name the handset, for example, after the room in which it is placed, or after the person who uses it most frequently.

The functions described on these pages are also accessible via the *Settings* menu. Please refer to the chapter *Preference settings* on page 40 for more information.

If you register a previously named handset to the base, this name appears in the display when registration is complete. To use the same name, move the cursor to the ♦ symbol and press OK.

When registration is complete, the display prompts you to name the handset. This is practical if you have more than one handset. You can enter this setting at a later date, if you wish.

The display prompts you to enter a name

Enter handset name?

Press OK to be able to do so, or press C if you wish to skip this step

OK

—
♦ ABCDEFGHIJKL...

Turn the wheel to select the letters for the name. Both upper and lower case letters are available



Press to store the selected letter

OK

When the name is complete, turn the wheel to move the cursor to the ♦ symbol. *Name OK?* appears in the display



Living Room
◀ Name OK? ▶

Press to store the name. You can now set the time and date

OK

Living Room
Stored

Set the time and date

After you have registered the first handset and named it, the display prompts you to set the time and date. The time is shown when the phone is not in use and when there is no new information in the display. Time and date are also shown with Caller ID and Redial information.

*You can register additional handsets in this way only if you use the handset with the BeoLine base.

Set clock? is shown

Set clock?

Press OK to be able to set the clock, or press C if you wish to skip this step

OK

Set year

◀ 2005 ▶

Turn the wheel to set the year



Press to store and move to the month setting

OK

Set the month, day, hour and minute by turning the wheel and pressing OK



OK

When you have set the time and date, the handset prompts you to register more handsets*.

Register more handsets?

Press OK If you have more handsets to register. The base is automatically opened for registration. If you do not have more handsets, press C and registration is complete.

OK

Base is open for registration



When the phone is idle, the display shows the handset's number (1:) and its name, if you have given it one.

Handset keys

CALLER ID

Access the Caller ID list

REDIAL

Access the Redial list

PHONEBOOK

Access the Phonebook. Also used for storing names and numbers in the Phonebook



Turn the wheel to search in Phonebook, Redial, Caller ID and the phone's menu system. During a call, turn the wheel to adjust the volume

OK (wheel middle)

- Accept and store entries or choices in the display
- Depending on the state of the phone, pressing OK gives you access to additional functions or options, which you can view by turning the wheel
- Press and hold to switch the handset off, and press once to switch it on again

C

Press to delete the most recent entry. Press and hold to exit a function



Press to make and end a call

A-V

Press to be able to adjust the volume of Bang & Olufsen audio and video systems

INT

Press to be able to call an internal handset. You can then look through the list of handsets with the wheel, or select a handset by pressing that handset's number (1-8*)

R

Used in conjunction with Call Forwarding, Call Waiting and other automated services

0 - 9

Digit keys for entering telephone numbers

*

Used in telephone numbers, for Call Forwarding and other automated services

**If you use a BeoCom 6000 base, a BeoLine PSTN base or a BeoLine ISDN base, you can only register six handsets.*

Phone feedback – indicator lights


Indicator light on the handset

The indicator light flashes red when...

- The phone is off the hook
- The phone rings
- Unanswered calls are registered
- Conditions exist which affect or impede the optimal use of your phone.

Refer to page 15 for more information.

The indicator light shines green when the handset is in the charger and none of the situations described above exist.

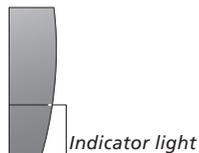


You can turn off the handset indication of unanswered calls. Refer to the chapter 'Preference settings' on page 40 for more information.

Connect and use a headset

Connect a headset to the socket on the handset as shown. You can then answer incoming calls by pressing **1** or any digit key on the handset keypad. Make a call as described on page 18.

An optional headset can be purchased from your Bang & Olufsen retailer.

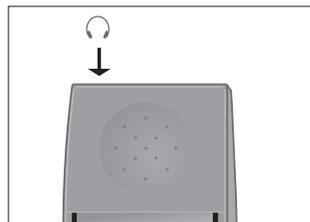

When you connect a headset, 'Headset connected' appears briefly in the display.

98765432
 ◀ Call? ▶

A black arrow indicates that more options are available if you turn the wheel – clockwise for right, and counter-clockwise for left. A grey arrow indicates that no more options are available.

◀ 3 new calls ▶
 View?

If you do not wish to view new call information, simply turn the wheel.

The handset display

Open the display ...

- > Press **OK** while the handset is in standby.
- > Turn the wheel to view options in the display.
- > Press **OK** to select an option.

Options in the main menu

- *Lock keypad?...* Lock the handset keypad. Refer to page 19.
- *Silence?...* Mute the handset ringer and battery alarm. Refer to page 20.
- *Battery status ...* See the charge level of the battery.
- *Delete lists ...* Delete the content of the Redial list or Caller ID list. Refer to page 33*.
- *Settings ...* Activate, adjust, or deactivate functions. Refer to page 40.

Display of new, unanswered calls

While the handset is in standby, the display informs you of any unanswered calls you have received. The menu disappears when you have seen the calls, and the call information is moved to the Caller ID list.

'3 new calls' appears in the display ...

- > Press **OK** to see the number, the time and the date of the newest call.
 If the name is stored in the Phonebook, this is shown instead of the number.
- > Turn the wheel to see the other calls.
- > When you have seen the new calls, press **C** to leave the menu.

**This is only possible if you use the handset with the BeoLine base.*

Troubleshooting via the display – the Alert menu

If conditions exist which impede or otherwise affect the optimal use of your phone, *Alert* appears in the display while the handset is in standby and remains as long as the conditions apply.

'Alert' appears in the display ...

- > Press **OK** to be able to view the cause of the alert
- > Turn the wheel to see if other conditions apply
- > Press **OK** to be able to adjust relevant settings, if available
- > Turn the wheel to adjust settings, and press **OK** to store them

If you do not wish to view the alert, simply turn the wheel.

Other messages in standby:

Register
handset to base?

The handset is not registered to a base. Press OK to start the first-time setup procedure.

1: Living Room
Silenced


The handset is silenced. Press OK to be able to deactivate the silence function.

1: Living Room
Line is busy

*The line is busy. Press **]**, then OK to 'break in' on the call. This is only possible if you use the handset with the BeoLine base.*

No contact
with base

There is no connection between the base and the handset.

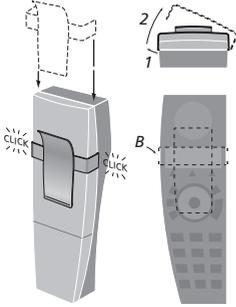

Attach the clip


With the clip you can attach the handset to your pocket. Attach the clip on the back of the handset:

To attach the clip ...

- > Slide the two flaps down along the two grooves on the sides of the handset.
- > When the clip is positioned correctly, approximately 4.5 cm from the top of the handset, it will click into place. Make sure the clip is firmly attached on both sides of the handset.

To remove the clip ...

- > Pull the left flap (B) out to the left with a flat object.
- > When the left flap is clear of the groove, pull the clip back – be careful not to scratch the handset with the clip.

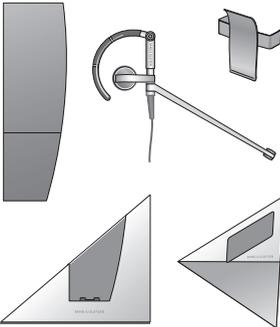

BeoCom 6000 can only be used with the Bang & Olufsen accessories shown: Extra handset, EarSet 1 Home, Clip, Table charger, Wall charger.

Daily use

If you end a call to or from a number not previously stored in the Phonebook, the display prompts you to do so. Refer to *Store a number after a call* on page 22 for more information.

To get a dial tone before entering the number, press **]**

Make and answer calls

The **]** key on the BeoCom 6000 is used to start and end a call. During the call, the phone displays the duration of the call and the number or name of the person called. If you do not wish to answer a call, you can mute the ringing signal.

To make a call ...

Enter the telephone number

0 – 9

98765432_

To correct a digit, turn the wheel to move the cursor to the digit in question and press **C** to delete it



98765432

C

Press **]** to make the call. The call time is shown, and if the name is stored in the Phonebook, this is shown as well



98765432

Time: 0:19

Press **]** to end the call. Alternatively, place the handset in the charger



To answer a call ...

Press **]** to answer the call



23456789

Time: 0:02

Press **]** to end a call. Alternatively, place the handset in the charger



To mute a handset's ringing ...

Press **C** to mute the ringing signal for the incoming call. The indicator light on the handset flashes until the caller hangs up the phone



Lock the handset keypad

You can lock the handset keypad to avoid pressing keys when, for example, you carry the handset in a pocket. If you lock the handset keypad, you can still answer calls, but you have to unlock the keypad to make a call.

To lock the handset keypad ...

Press while the handset is in standby

OK
 ◀ Lock keypad? ▶

Press OK. *Keypad locked* appears briefly in the display

OK
 Keypad locked

To unlock the handset keypad ...

Press to be able to unlock the keypad. *Unlock – No?* appears in the display

OK
 Unlock
 ◀ No? ▶

Turn the wheel until *Unlock – Yes?* is shown and press OK

◌
 Unlock
 ◀ Yes? ▶
OK

You can also lock the handset keypad by pressing and holding the **#** button.

You can set the handset to lock automatically when not in use. You activate and deactivate this function via the *Settings* menu. Refer to page 40 for more information.

Silence the handset ringer and battery alert

You can silence the handset ringer if you do not want to be disturbed. While the handset is silenced, the ringer is deactivated, but incoming calls are still registered in the New calls menu, as described on page 14.

To silence the handset ringer ...

Press to bring up the main menu

OK

Turn the wheel until *Silence?* is shown and press OK. *Silence selected* appears briefly in the display, and this changes to *Silenced* when the handset returns to standby



◀ Silence? ▶

OK

Silence
selected

1:Living Room
Silenced

To reactivate the handset ringer ...

Press to be able to reactivate the ringer. *Silence off?* appears in the display

OK

◀ Silence off? ▶

Press OK. The ringer is reactivated. *Silence off – selected* appears briefly in the display, and the handset returns to standby

OK

Silence off
selected

1:Living Room
12:15 24 Oct

Volume and the microphone

During a call, you can adjust the volume level using the wheel. You can also switch off the microphone if you do not wish the person on the phone to overhear a conversation you are having with a person in the room.

To turn the handset volume up or down ...

Turn the wheel to adjust the handset volume



To turn the microphone on or off during a call ...

Press OK. *Mic. off?* appears in the display



Press OK. *Microphone off* appears in the display and the handset beeps at short intervals until the microphone is switched back on



To switch on the microphone, press OK twice



A selected volume setting – with the exception of the two highest settings – applies to all subsequent calls until the next time you adjust the volume.

If a headset is connected to your handset and you switch the microphone off, the phone does not beep.

Store a number after a call

Here are some tips that can help you make Phonebook entries easier to find:

Mary & Robert

When entering couples' names, put first names in alphabetical order;

B&O Michael

When entering names of colleagues, put the company name first;

L Jane

When entering the names of childrens' friends, start with the child's first initial.

After a call, you will be asked whether you want to store the number in the Phonebook, if it is not already there. You can store the number type – home, work, or mobile phone* – and enter a name with the number. You can also add numbers to names already stored in the Phonebook.

After a call ...

The display shows the number and prompts you to store it in the Phonebook. If a name was received with Caller ID information, this name is shown

98765432

Store number?

Press to be able to store the number. *New name?* appears in the display. If you wish to add a number to a name stored in the Phonebook*, refer to the next page

OK

98765432

◀ New name? ▶

Press if the number belongs to a name not yet stored in the Phonebook. The spelling line appears in the display

OK

–
◆ ABCDEFGHIJKL...

Turn the wheel to select the letters for the name and press OK to store the selected letter. Both upper and lower case letters are available



OK

D_
◆ abcdefghijklm...

To include digits, press the number keys

0 – 9

Turn the wheel to move the cursor to the ◆ symbol. Name OK? appears in the display



David Jones

◀ Name OK? ▶

Press to store the name. The display prompts you to select a number type

OK

Number type
◀ Home? ▶

Turn the wheel to select either *Home*, *Mobile* or *Work* and press OK to store it

 


OK

*You can only enter the number type and add a number to a name if you use the handset with the BeoLine base.

To add a number to a name in the Phonebook ...


When the display prompts you to store a new name, turn the wheel to select *Add to name?* and press OK. The first letters of names stored in the Phonebook appear in the display



OK



 Turn the wheel to select the first letter of a name and press OK. The first name beginning with the selected letter appears in the display




OK

Turn the wheel to select the name and press OK to be able to select a number type



 OK



Turn the wheel to select a number type and press OK to store it



OK



Search the Phonebook and make a call

If you use the handset with the BeoLine base ...

When you search through the Phonebook, pausing at a name causes the display to alternate between showing the number type and the number itself. Turning the wheel resumes the search.

Names longer than 16 characters are truncated. Pausing at a long name causes the name to scroll slowly back and forth, so that the whole name is shown.

*Number types are only available if you use the handset with the BeoLine base.

When the phone is not in use, you can turn the wheel to search directly from the entire list of names in the Phonebook, along with their number types*.

When the phone is not in use ...

Turn the wheel to search through the Phonebook and press **]** to make a call. This method is quickest if there are very few entries in the Phonebook

If the Phonebook contains many entries, press **PHONEBOOK** to access it. The letters in the display correspond to the first letters of Phonebook entries

Turn the wheel to select the first letter

Press to be able to search through names beginning with the letter you selected

Turn the wheel to search through the names

Press to make a call



David Jones

Home



PHONEBOOK

First letter:

ABDEFHIK



First letter:

ABDEFHIK

OK

Dan Smith

Home



David Jones

Mobile



Use Redial

You can call the number shown in the display directly by pressing 

You can store telephone numbers from the Redial list directly in the Phonebook. Refer to *Store Redial and Caller ID numbers* on page 36 for more information.

The Redial list is only shared by handsets set up to be 'common'. Refer to *Make a handset 'personal' or 'common'* on page 45 for more information.

*Number types are only available if you use the handset with the BeoLine base.

The Redial function stores the last 24 telephone numbers you called. In addition to the number called, you can also view the time, date, and duration of the call. If you have entered a name in the Phonebook, this is displayed instead of the number. Internal calls are not registered in the Redial list.

To call from the Redial list ...

Press to access the Redial list

Turn the wheel to select a name or number. If you pause at a number, the display alternates between showing the name and the number type*

Press to be able to select a number type to call. If there is only one number type stored with a name, the display prompts you to make the call. Otherwise ...

... turn the wheel to select a number type and press OK

Press again to make the call.

To see call information for a selected outgoing call ...

Press to view your options

Turn the wheel until *Details?* appears in the display

Press OK. The phone number and the call duration are shown

REDIAL


David Jones
11:51 10 Dec

OK
David Jones
◀ Call? ▶


David Jones
◀ Home? ▶

OK

OK

OK
David Jones
◀ Call? ▶


David Jones
◀ Details? ▶

OK
David Jones
Time: 1:02:14

To delete a specific Redial number from the list ...

Press to access the Redial list

REDIAL

Turn the wheel to select the name or number



12345678
11:51 10 Dec

Press to view your options

OK

12345678
◀ Call? ▶

Turn the wheel until *Delete?* appears in the display



12345678
◀ Delete? ▶

Press to delete the selected entry

OK

12345678
deleted

Use Caller ID

This function requires a Caller ID subscription with your telephone company.

You can store telephone numbers from the Caller ID list directly in the Phonebook. Refer to *Store Redial and Caller ID numbers* on page 36 for more information.

Even if you subscribe to Caller ID, caller information may still be unavailable for a particular call.

The following may appear in the display* during an incoming call:

- ‘Anonymous’... Calls from unlisted numbers;
- ‘Caller ID not possible’... Caller ID not supported by the service provider;
- ‘International’... Information unavailable for international calls.

*Your service provider may also send information other than that described above.

The last 24 numbers you have received calls from are stored in the Caller ID list. If a name is stored with the number in the Phonebook, this name is shown, even if your phone company has provided Caller ID name information. Identical numbers are only stored once in the list – the most recent call.

To call from the Caller ID list ...

Press to access the Caller ID list

Turn the wheel to select a name or number. If you pause at a number, the display alternates between showing the name and the number type

Press to be able to select a number type to call. If there is only one number type stored with a name, the display prompts you to make the call. Otherwise ...

... turn the wheel to select a number type and press OK

Press again to make the call.

To see call information for a selected call ...

Press to view your options

Turn the wheel until *Details?* appears in the display

Press OK. The call duration and number of calls are shown

CALLER ID


David Jones
12:41 12 Dec

OK
David Jones
◀ Call? ▶


David Jones
◀ Home? ▶

OK
OK

OK
David Jones
◀ Call? ▶


David Jones
◀ Details? ▶

OK
David Jones
Time: 1:02:14

To delete a specific Caller ID number from the list ...

Press to access the Caller ID list

CALLER ID

David Jones
12:41 12 Dec

Turn the wheel to select the name or number


John Smith
11:51 10 Dec

Press to view your options

OK
John Smith
◀ Call? ▶

Turn the wheel until *Delete?* appears in the display


John Smith
◀ Delete? ▶

Press to delete the selected entry

OK
John Smith
deleted

Advanced operations

Enter a new name and number in the Phonebook

Names and numbers are shared by all handsets set up to be 'common'. Refer to *Make a handset 'personal' or 'common'* on page 45 for more information.

If you use a base other than BeoLine ...

- Numbers can only contain up to 24 digits
- Number types are unavailable
- You cannot add a number to a name stored in the Phonebook

At any time, you can store a new name and number in the Phonebook, or add a new number to an existing name. A number can contain up to 48 digits, and a name up to 25 characters. You can store up to 200 entries.

To enter a new name and number ...

Enter the telephone number and press OK to be able to store the number. *Store number?* appears in the display

0 – 9

OK

98765432

Store number?

Press to be able to store the number. *New name?* appears in the display. If you wish to add a number to a name stored in the Phonebook, refer to the next page

OK

98765432

◀ New name? ▶

Press to be able to store a new name. The spelling line appears in the display

OK

–
◆ ABCDEFGHIJKL...

Turn the wheel to select the letters for the name and press to store the selected letter. Both upper and lower case letters are available



OK

D_
◆ abcdefghijklm...

To include digits, press the number keys

0 – 9

Turn the wheel to move the cursor to the ◆ symbol. *Name OK?* appears in the display



David Jones

◀ Name OK? ▶

Press to store the name. The display prompts you to select a number type

OK

Number type
◀ Home? ▶

 
Turn the wheel to select either *Home*, *Mobile* or *Work* and press OK to store it



OK

To add a number to a name in the Phonebook ...


When the display prompts you to store a new name, turn the wheel to select *Add to name?* and press OK. The first letters of names stored in the Phonebook appear in the display



OK



 Turn the wheel to select the first letter of a name and press OK. The first name beginning with the selected letter appears in the display




OK

Turn the wheel to select the name and press OK to be able to select a number type



 OK



Turn the wheel to select a number type and press OK to store it



OK



Delete a name and number in the Phonebook

Provided you use the handset with the BeoLine base, selecting *Delete* only deletes the number – home, mobile, or work – that you have selected. Other numbers stored with the same name are not affected, nor is the name itself. If, however, there is only one number stored with a name, deleting this number also deletes the name.

You can delete names and numbers stored in the Phonebook.

Press PHONEBOOK

PHONEBOOK

Turn the wheel to select a first letter and press OK



First letter:

ADHJK

OK

Turn the wheel to select an entry and press OK



David Jones

Mobile

OK

Turn the wheel until *Delete?* appears in the display and press OK to delete the entry



David Jones

◀ Delete? ▶

OK

Delete the content of the Caller ID list or Redial list

You can delete the content of either list at any time.

To delete the content of a list ...

Press to bring up the main menu

OK

Turn the wheel until *Delete lists?* is shown and press OK



◀ Delete lists? ▶

OK

Turn the wheel to select *CallerID list?* or *Redial list?* and press OK to delete the content of the list



◀ Redial list? ▶

OK

Deleted

Redial list

If you have set your handset to *personal* as described on page 45, deleting the content of a list only applies to the handset. If you have set the handset to *common*, the list is deleted for all handsets set to *common*.

You can only delete list content in this way if you use the handset with the BeoLine base.

Edit a name or number in the Phonebook

You can only store multiple numbers with a name if you use the handset with the BeoLine base.

You can edit a Phonebook entry – which typically contains a name and at least one number* – at any time.

Edit a number in the Phonebook ...

Turn the wheel to select an entry



David Jones
Home

Press to view your options

OK

◀ Call? ▶

Turn the wheel until *Edit?* is shown



◀ Edit? ▶

Press to be able to edit the number

OK

98768432

If editing a name only, press OK and skip to the next page. Otherwise ...

OK

... turn the wheel to select a digit you wish to edit



98768432

Press to delete the digit

C

9876432

Enter a digit to replace the one you deleted

0 – 9

98765432

Repeat the above three steps for each digit you wish to edit

Press when you are done editing the number.

OK

You can now edit the name, as described on the following page

To edit a name ...

The display prompts you to confirm that the number is correct

98765432_
◀ Number OK? ▶

*You can only store the number type if you use the handset with the BeoLine base.

Press to confirm

The display prompts you to confirm that the name is correct

OK
David Jones_
◀ Name OK? ▶

If the name is correct, press OK. Otherwise ...

... turn the wheel to select the letters for the name

OK
◌
David Jones_
◆ ABCDEFGHIJKL...

Press to store the selected letter, or ...

... press to delete letters

Finish editing the name

Turn the wheel to move the cursor to the
◆ symbol and press OK to store the name

OK
◌
David Jones_
◀ Name OK? ▶

Turn the wheel to select the number type* and
press OK to store it

OK
◌
David Jones
◀ Mobile? ▶

OK

**It is only possible to store the number type if you use the handset together with the BeoLine base.*

Store Redial and Caller ID numbers

Telephone numbers from the Redial and Caller ID lists can be stored and named in the Phonebook.

Press REDIAL or CALLER ID. The last number in the list is shown in the display

**REDIAL
CALLER ID**

Turn the wheel to select the desired number


76543210

Press to view your options

OK
76543210
◀ Call? ▶

Turn the wheel until *Store number?* appears in the display and press OK


◀ Store number? ▶
OK

Turn the wheel to select characters for the name and press OK to store the selected character


—
◆ ABCDEFGHIJKL...
OK

Turn the wheel to move the cursor to the ◆ symbol and press OK to store the name


◀ ◆ Name OK? ▶
OK

Turn the wheel to select the number type* and press OK to store the entry


◀ Work? ▶
OK

Adjust volume level on audio/video products

You can adjust the volume of your Bang & Olufsen audio and video products directly from your handset. First select which sound source, audio or video, you wish to adjust.

To adjust the volume of an audio or video system ...

Press repeatedly until the desired system type appears in the display

A·V

Volume

Audio

A·V

Video

A·V

Link audio

A·V

Link video

Turn the wheel to turn the volume up or down



Volume up

Link video

While the phone is ringing, you can adjust the volume of a Bang & Olufsen product without pressing the A·V button first. Simply turn the wheel. The product must, however, be the same one on which you last adjusted the volume with the handset.

Call and store extension numbers in the Phonebook

If you need to make a call to an extension number, such as those used by banks and other businesses with switchboards, a pause must be inserted before the extension number. Store the main number, the pause and the extension number in the Phonebook. You can then call the number from the Phonebook.

To call an extension number directly ...

| | |
|---|-------|
| Enter the main telephone number | 0 – 9 |
| Press to make the call. Wait for a connection |] |
| Enter the extension number | 0 – 9 |
| Press to end the call |] |

To store an extension number in the Phonebook ...

| | |
|---|---|
| Enter the main telephone number | 0 – 9 98765432 |
| Press to be able to insert a pause | OK 98765432 ◀ Store number? ▶ |
| Turn the wheel until <i>Insert pause?</i> appears in the display and press OK | ⌚ 98765432 ◀ Insert pause? ▶ OK 98765432- |
| Enter the extension number | 0 – 9 98765432-123 |
| Press twice to store the entry. You can now give the number a name, as described on page 30 | OK OK |

*To call an extension number from the
Phonebook ...*

Turn the wheel to search through the entire
Phonebook



Press to make a call. The main number is dialed



The display prompts you to continue. Press OK to
call the extension number

Continue?

OK

Preference settings

When you browse through the *Settings* menu, the current settings for each option are shown in the display. For example, when you browse to the *Clock* option, the current time and date appear on the second line of the display.

The *Settings* menu contains several options which allow you to adjust BeoCom 6000 functions.

To choose settings in the menu ...

Press to bring up the main menu

OK

Turn the wheel to display *Settings* and press OK to bring up the menu



◀ Settings ▶

OK

Turn the wheel until the desired option is displayed, such as *Clock*



◀ Clock ▶

Press to bring up the menu

OK

Set year
◀ 2005 ▶

Turn the wheel to select a setting and press OK to store it



OK

The *Settings* menu options

Ringer ... This menu contains three separate ringer settings:

- *Ringer on/off* lets you switch the ringer on or off, and set a time period in which the phone will not ring. If you switch off the ringer, the phone does not ring, but it does register incoming calls in the Caller ID list. The ringer is disconnected until you change the setting.
- *Ringer level* lets you set the ringer volume. Options are *Extra low*, *Low*, *Medium* or *High*. The ringing signal selected is played after a moment.
- *Ringer melody* lets you choose from eight melodies. The ringing signal selected is played after a moment.

Clock ... Enter the time and date.

Auto lock ... Options are *On* and *Off*. Locking the handset keypad prevents inadvertent operation of the keys. You can still receive calls, but the handset keypad locks again automatically after you end a call.

*This menu is only accessible if you use the handset with the BeoLine base.

News indicator ... The news indication – the flashing red light on the handset and the display message indicating new, unanswered calls – is set to *On* from the factory, so you can see how many new calls you have received. Options are *On* and *Off*.

Battery alert ... Alerts you audibly when the handset battery requires charging. Options are *On*, *Off* and *Timed off*. If you select *Timed off*, you can then use the wheel to set a daily time period during which the battery alert will not occur – for example, at night.

Auto off-hook ... Switch Auto off-hook to *On* if you want to answer a call as soon as you lift the handset from the charger – that is, without pressing **⏏**. Auto off-hook is set to *Off* when you purchase the phone. Auto off-hook can only be used if the handset is placed in the charger. If the handset is not placed in the charger, you must press **⏏** to answer a call.

Handset ... The *Handset* menu contains three sub-menus:

- *Enter name* allows you to give the handset a new name using the wheel and OK key. Note that this menu is called *Change name* after you enter a name for the handset the first time.
- *Register* allows you to register the handset to the BeoLine base.
- *Handset type* allows you to set the handset to be *Personal* or *Common*, as described on page 45.

Base... The *Base* menu contains three sub-menus:

- *Remove handset* cancels registration of a handset to the base.
- *Open base for registration* allows you to open the base for registration of additional handsets*.
- *Change PIN* allows you to enter a new pincode for your base and change the pincode. Use the number keys to enter the pincode and the OK key to store it. The default pincode is 0000.

**This option is only available if you use the handset with a BeoCom 6000 base, a BeoLine PSTN base, or a BeoLine ISDN base.*

Language ... Select the language of the display texts.

Switchboard*... Set BeoCom 6000 for use with a switchboard. Options are *Yes* and *No*. If you choose *Yes*, use the number keys to enter a prefix code and turn the wheel to select a pause length. You can select a pause length between 0 and 12 seconds, or select *Wait*. Note that you must enter prefix codes manually when entering phone numbers in the Phone-book.

Flash time ... Choose *Long*, *Short* or *Customized*. The correct flash time depends on how you have connected your phone.



With several handsets registered to one base, you can make your own phone system. The handsets can all receive external calls, also during internal calls between handsets. Handsets in the system are numbered 1–8* and can be named as well.

Each handset is initially set up as 'common'. This means that the Phonebook, Caller ID list and Redial list are all updated by the base and shared with other handsets in the system. If you want an independent Phonebook, Caller ID list and Redial list in an individual handset, make the handset 'personal' instead.

For further information about the possibilities a system setup offers, please refer to the following pages.

**If you use a BeoCom 6000 base, a BeoLine PSTN base or a BeoLine ISDN base, you can only register six handsets.*

Call another handset

The phone system allows one internal call and one external call to take place at the same time.

If you misplace a handset, you can locate it by making a call to that handset.

If you use a BeoCom 6000 base, a BeoLine PSTN base or a BeoLine ISDN base, you can only register six handsets.

You can call one handset or call all handsets simultaneously. If you call all handsets, the handset that responds first receives the call. If you call one handset, the display shows which handset has been called.

To call a handset ...

Press to make an internal call

INT

Press the number of the handset and the call is made automatically. Alternatively ...

1 – 8

... turn the wheel to search through the internal listing of handsets and press  to make the call.



3:Kitchen

If the internal call can not be made, you will hear a busy signal



To call all handsets ...

Press to make an internal call

INT

Press to call all handsets

To end a call ...

Press to end a call



Make a handset 'personal' or 'common'

You can set your handset to be 'personal' instead of 'common'. The Phonebook, Redial list and Caller ID list of a personal handset are located in the handset and not the base.

Press to bring up the main menu

OK

Turn the wheel to select the *Settings* menu and press OK to bring up the menu



◀ Settings ▶

OK

Turn the wheel to select the *Handset* menu and press OK to bring up the menu



◀ Handset ▶

OK

Turn the wheel to select *Handset type* and press OK



◀ Handset type ▶

OK

Turn the wheel to select *Personal or Common* and press OK to store the settings



◀ Common? ▶

OK

If you have a phone system with one or more handsets set to *personal* and the others set to *common*, note the following:

- Changing a handset from *personal* to *common* causes the personal Phonebook, Caller ID list and Redial list to be *replaced, not* supplemented, by the common lists. Updating the Phonebook, Caller ID and Redial lists may take a few minutes.

Transfer external calls

If you use a BeoCom 6000 base, a BeoLine PSTN base or a BeoLine ISDN base, you can only register six handsets.

You can transfer an external call to another handset or to all handsets. You can talk with the person answering the internal handset before transferring the call. When you transfer an external call to all handsets, the call goes to the handset which answers first.

Transfer an external call ...

Press to make an internal call

INT

Press the number of the handset and the call is made automatically. Alternatively ...

1 – 8

... turn the wheel to search through the internal listing of handsets and press  to make the call. If the internal call can not be made, you will hear a busy signal



3:Living Room



If the internal call is answered ...

The display prompts you to transfer the call

◀ **Transfer?** ▶

Press to enter your choice

OK

Retrieve the external call if the internal call is not answered ...

Press OK or  to retrieve the external call on hold

◀ **Retrieve?** ▶

OK

Make an internal conference call

During an external call, you can call another handset in the system to establish a conference call. If one of the participants hangs up, the call continues with those remaining.

Start a conference call with one internal and one external party ...

Press to make an internal call during an external call **INT**

Press the number of the handset and the call is made automatically. Alternatively ... **1 – 8**

... turn the wheel to search through the internal listing of handsets and press  to make the call. If the internal call can not be made, you will hear a busy signal



3:Kitchen



If the internal call is answered ...

Turn the wheel to select *Conference?* and press OK to start the conference call



◀ Conference? ▶

OK

Press to end the conference call 

Retrieve the external call if the internal call is not answered ...

Press OK or  to retrieve the external call on hold

◀ Retrieve? ▶

OK

If you use a BeoCom 6000 base, a BeoLine PSTN base or a BeoLine ISDN base, you can only register six handsets.

You can also establish an internal conference call by 'breaking in' on a call in progress. For further information, refer to page 15.

Accessories

- Attach the clip, 16
- BeoCom 6000 accessories, 13

Base

- Make a handset 'personal' or 'common', 45
- Registration of the handset to a base, 8
- The *Base* menu, 41
- The BeoLine base, 8

Battery

- Battery status, 6
- Charge the handset battery, 6
- Replace the battery, 7
- Silence the handset ringer and battery alert, 20
- The *Battery Alert* menu, 41

BeoLine

- Registration of the handset to a base, 8
- The BeoLine base, 8

BeoLink

- Adjust volume level on audio/video products, 37

Caller ID

- Call from the Caller ID list, 28
- Delete a specific Caller ID number from the list, 28
- Delete the content of the Caller ID list or Redial list, 33
- Store Redial and Caller ID numbers, 36
- Use Caller ID, 28

Calls

- Call and store extension numbers in the Phonebook, 38
- Call another handset, 44
- Call from the Caller ID list, 28
- Call from the Redial list, 26
- Make and answer calls, 18
- Make an internal conference call, 47
- Search the Phonebook and make a call, 24
- Store a number after a call, 22
- Transfer external calls, 46

Charging

- Battery status, 6
- Charge the handset battery, 6

Conference calls

- Make an internal conference call, 47

Delete

- Delete a name or number in the Phonebook, 32
- Delete a specific Caller ID number from the list, 29
- Delete a specific Redial number from the list, 27
- Delete the content of the Caller ID list or Redial list, 33

Displays and menus

- Battery status, 6
- Display of new, unanswered calls, 14
- Options in the main menu, 14
- See call information for a selected outgoing call, 27
- The handset display, 14
- Troubleshooting via the display – the Alert menu, 15

Edit

- Delete a name or number in the Phonebook, 32
- Edit a name or number in the Phonebook, 34
- Enter a new name and number in the Phonebook, 30

Extension numbers

- Call and store extension numbers in the Phonebook, 38

Handset

- Call another handset, 44
- Charge the handset battery, 6
- First-time registration of the handset to a base, 8
- Handset keys, 12
- Lock the handset keypad, 19
- Make a handset ‘personal’ or ‘common’, 45
- Mute a handset’s ringing, 18
- Name the handset, 10
- Phone feedback – indicator lights, 13
- Set the time and date, 11
- Silence the handset ringer and battery alert, 20
- The handset display, 14
- The *Handset* menu, 41

Headset

- Connect and use a headset, 13

Indicator lights

- Phone feedback – indicator lights, 13

Maintenance

- Clean BeoCom 6000, 7
- Replace the battery, 7

Microphone

- Volume and the microphone, 21

Phonebook

- Call and store extension numbers in the Phonebook, 38
- Delete a name and number in the Phonebook, 32
- Edit a name or number in the Phonebook, 34
- Enter a new name and number in the Phonebook, 30
- Search the Phonebook and make a call, 24
- Store a number after a call, 22
- Store Redial and Caller ID numbers, 36

Placement

- Placement and surroundings, 7

Redial

- Call from the Redial list, 26
- Delete a specific Redial number from the list, 27
- Delete the content of the Caller ID list or Redial list, 33
- See call information for a selected outgoing call, 28
- Store Redial and Caller ID numbers, 36
- Use Redial, 26

Registration

- Registration of the handset to a base, 8

Ringling signal

- Mute a handset's ringing, 18
- Silence the handset ringer and battery alert, 20
- The *Ringer* menu, 40

Search

- Call from the Caller ID list, 28
- Call from the Redial list, 26
- Search the Phonebook and make a call, 24

>> *Index*

Settings

Adjust volume level on audio/video products, 37

Lock the handset keypad, 19

Make a handset 'personal' or 'common', 45

Name the handset, 10

Set the time and date, 11

Silence the handset ringer and battery alert, 20

The *Auto lock* menu, 40

The *Auto off-hook* menu, 41

The *Base* menu, 41

The *Battery Alert* menu, 41

The *Clock* menu, 40

The *Flash Time* menu, 42

The *Handset* menu, 41

The *Language* menu, 41

The *News Indicator* menu, 41

The *Ringer* menu, 40

Volume and the microphone, 21

System

Call another handset, 44

Make a handset 'personal' or 'common', 45


Make an internal conference call, 47

Transfer external calls, 46

Volume

Adjust volume level on audio/video products, 37

Volume and the microphone, 21

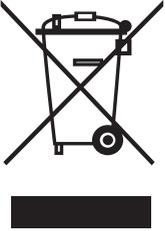

Waste Electrical and Electronic Equipment (WEEE) – Environmental protection

The European Parliament and the Council of the European Union have issued the Waste Electrical and Electronic Equipment Directive. The purpose of the Directive is the prevention of waste of electrical and electronic equipment, and to promote the reuse and recycling and other forms of recovery of such waste. As such the Directive concerns producers, distributors and consumers.

The WEEE directive requires that both manufacturers and end-consumers dispose of electrical and electronic equipment and parts in an environmentally safe manner, and that equipment and waste are reused or recovered for their materials or energy.

 
Electrical and electronic equipment and parts must not be disposed of with ordinary household refuse; all electrical and electronic equipment and parts must be collected and disposed of separately.

Products and equipment which must be collected for reuse, recycling and other forms of recovery are marked with the pictogram shown.

When disposing of electrical and electronic equipment by use of the collection systems available in your country, you protect the environment, human health and contribute to the prudent and rational use of natural resources. Collecting electrical and electronic equipment and waste prevents the potential contamination of nature with the hazardous substances which may be present in electrical and electronic products and equipment.

Your Bang & Olufsen retailer will assist with and advise you of the correct way of disposal in your country.

CE *This product is in conformity with the provisions of the Directives 1999/5/EC and 2006/95/EC.*



Technical specifications, features and the use thereof are subject to change without notice!



3510943110900002